

Dear customer

Through the purchase of this smart case you decided for a quality product made by KNOKE Beschlagtechnik. Please accept our thanks for your confidence. Please make yourself familiar with the product and its accessories before you start the assembly.

smart case

This instruction describes the mounting and handling of the KNOKE smart case.

Please read through this manual carefully and follow all security advice before you start the workings.

Please keep this instruction ready to hand. In case of damages that occur through disregard of this manual and of the security


advice the guarantee expires. We assume no liability for consequential damages that originate from this.




Important indications

After having unpacked the goods please compare the contents of the package with the specifications regarding the scope of delivery. Please check the drive and mains cable regarding intactness. If you note damages you are not alowed to use the appliance. In this case please contact your distributor.

Contents:

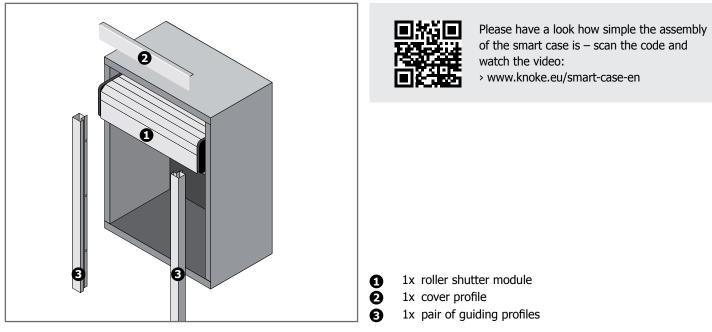


Depending on the version the guidance profiles can have one of the following profile cross sections:

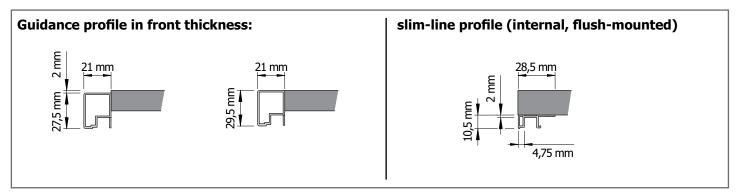



Guidance profile in front thickness

Recommended cabinet constructions for vertical operating direction

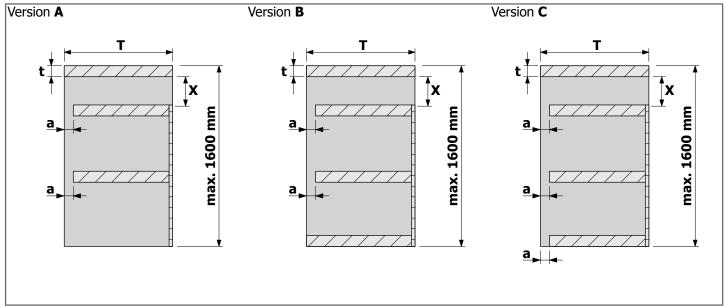

Dim. X	Roller shutter			
	smart plus KS 25 (F/L)		smart plus (in some markets) quasar	
Cabinet height	t = 16 mm	t = 19 mm	t = 16 mm	t = 19 mm
250 - 650 mm	103 mm	100 mm		
651 - 1200 mm	123 mm	120 mm		
1201 - 1600 mm	137 mm	134 mm		
250 - 1600 mm			158 mm	155 mm

	Roller shutter			
	smart plus	smart plus		
		(in some markets)	KS 25 (F/L)	quasar
Dim. T min.	300 mm	329 mm	300 mm	329 mm


	Roller shutter			
	smart plus	smart plus		
		(in some markets)	KS 25 (F/L)	quasar
Dim. a min.	13 mm	13 mm	13 mm	13 mm



smart case




Attaching the cover profile

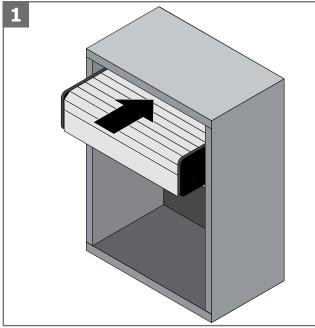


Push the smart case halfway into the cabinet

Connecting the guidance profile with the module

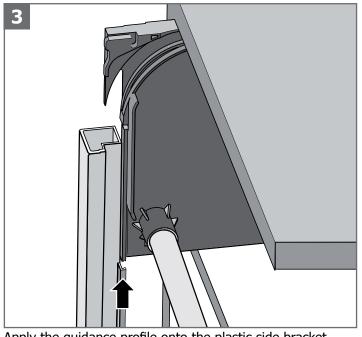

Apply the guidance profile onto the plastic side bracket

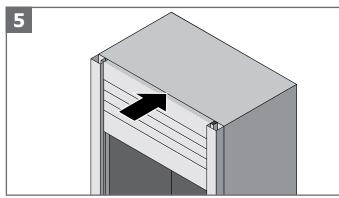



Push in the smart case entirely

KNOKE Beschlagtechnik GmbH Südstraße 2 32130 Enger


Telefon + 49 (0)5224 9945-0 Telefax + 49 (0)5224 9945-25


support@knoke.eu www.knoke.eu

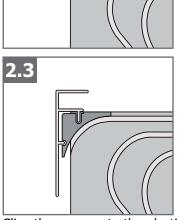


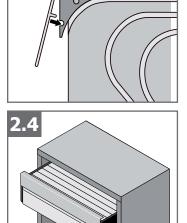


Clips the cover onto the plastic side parts of the unit

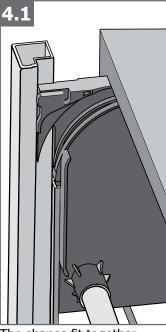

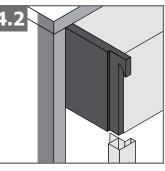

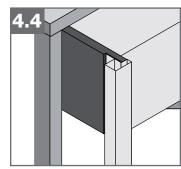


The shapes fit together

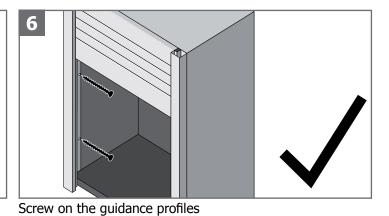




Set the tension of the spring


Version 1

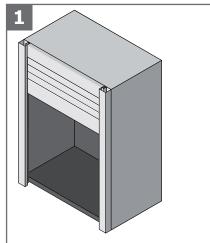


Move the roller shutter slightly down

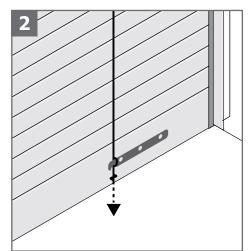


Remove the traction rope from the suspension and pull the rope

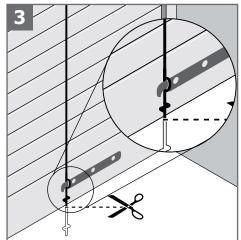


Tie a new knot in the rope and fit it around the suspension

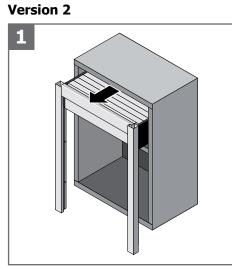

smart case pulled out half way

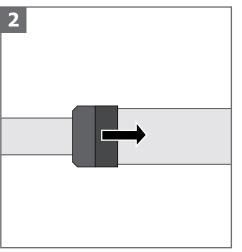

Press the tension ring to the middle

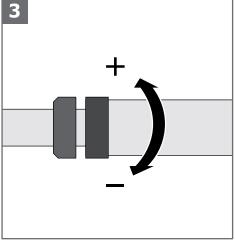

Turn the tension ring

Error correction

Error	Possible cause	Trouble shooting
Noticeable running noise of the roller shutter	Cover profile touches the roller shutter	Clips the cover profile securely on both plastic side parts
		Check the position of the cover profile: it must not be affected by overhanging shapes of the carcase.
	Module is not fitted tightly within the carcase	The guidance profiles are not pushed onto the side brackets. Push the profi- les on as shown before and therewith secure the complete unit.
	9 (0)5224 9945-0 support@knoke.eu 9 (0)5224 9945-25 www.knoke.eu	101825_12.2013